



3000 Series Top Plate

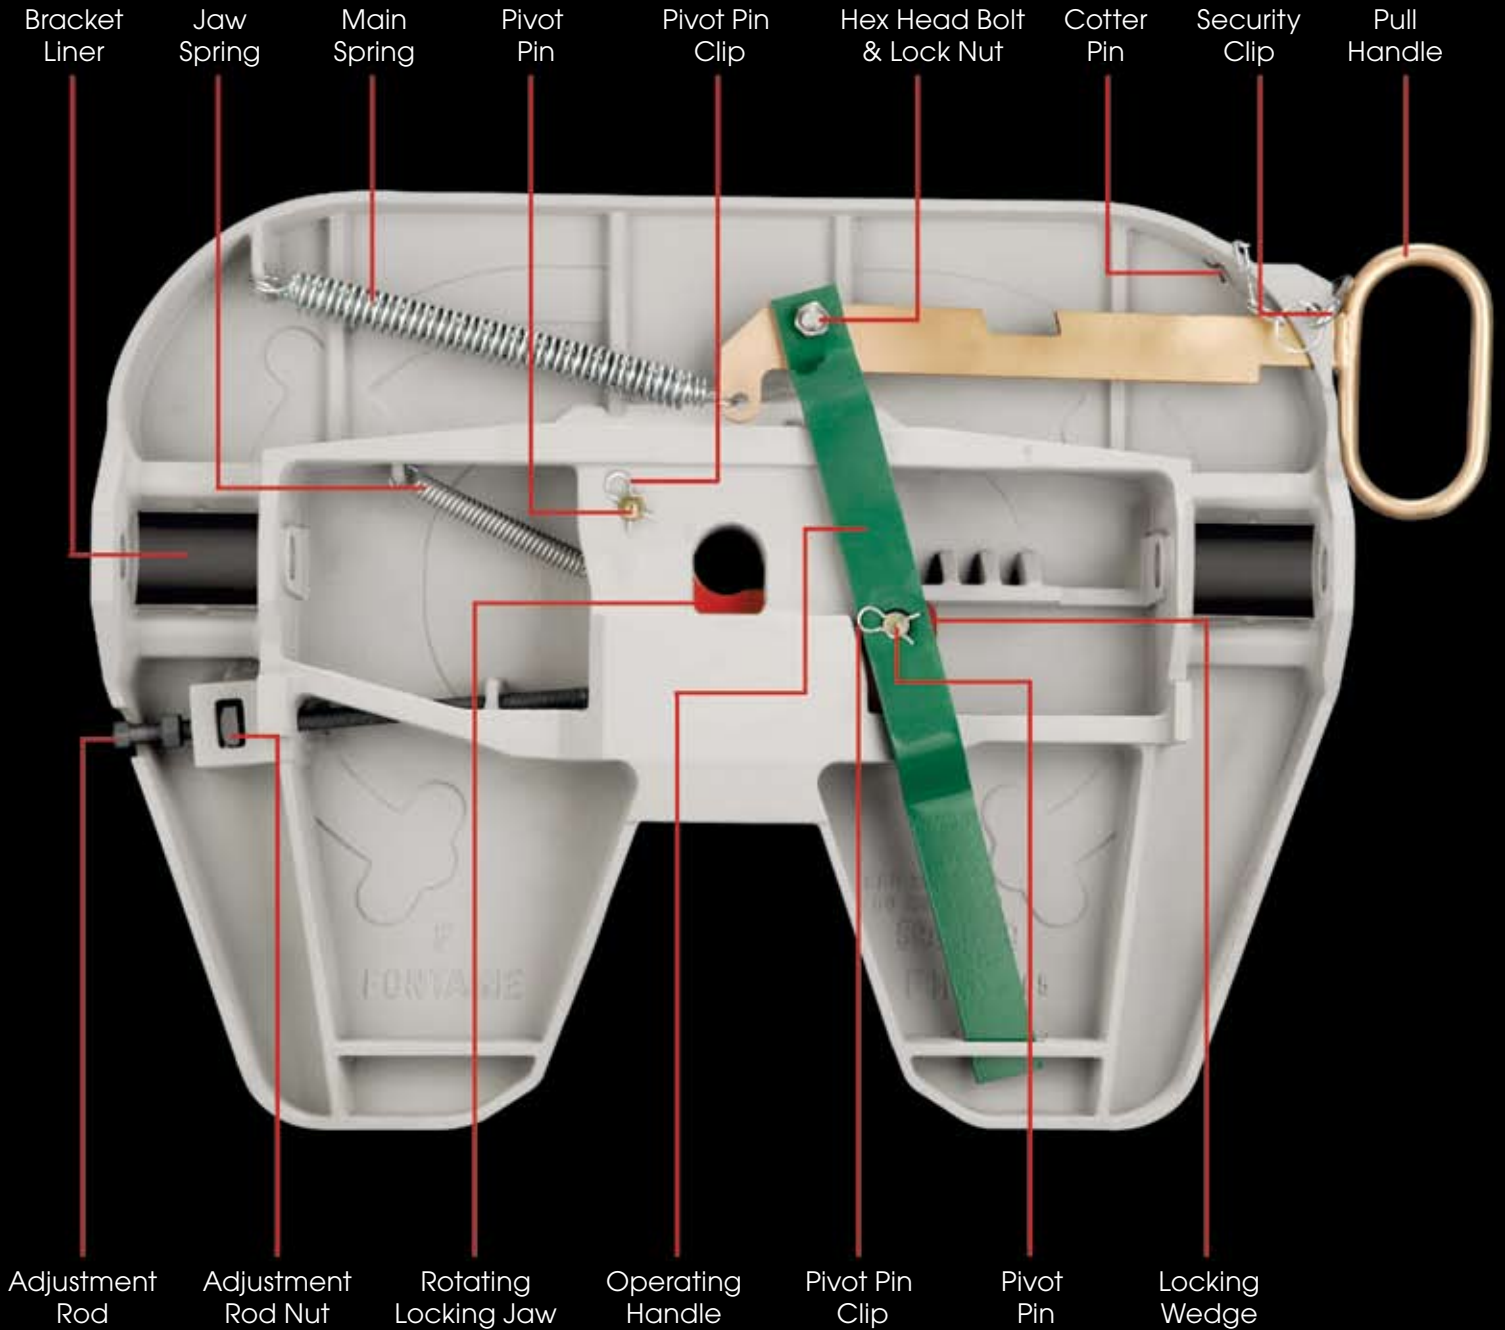

SLTPL3000 Model



3000 SERIES TOP PLATE

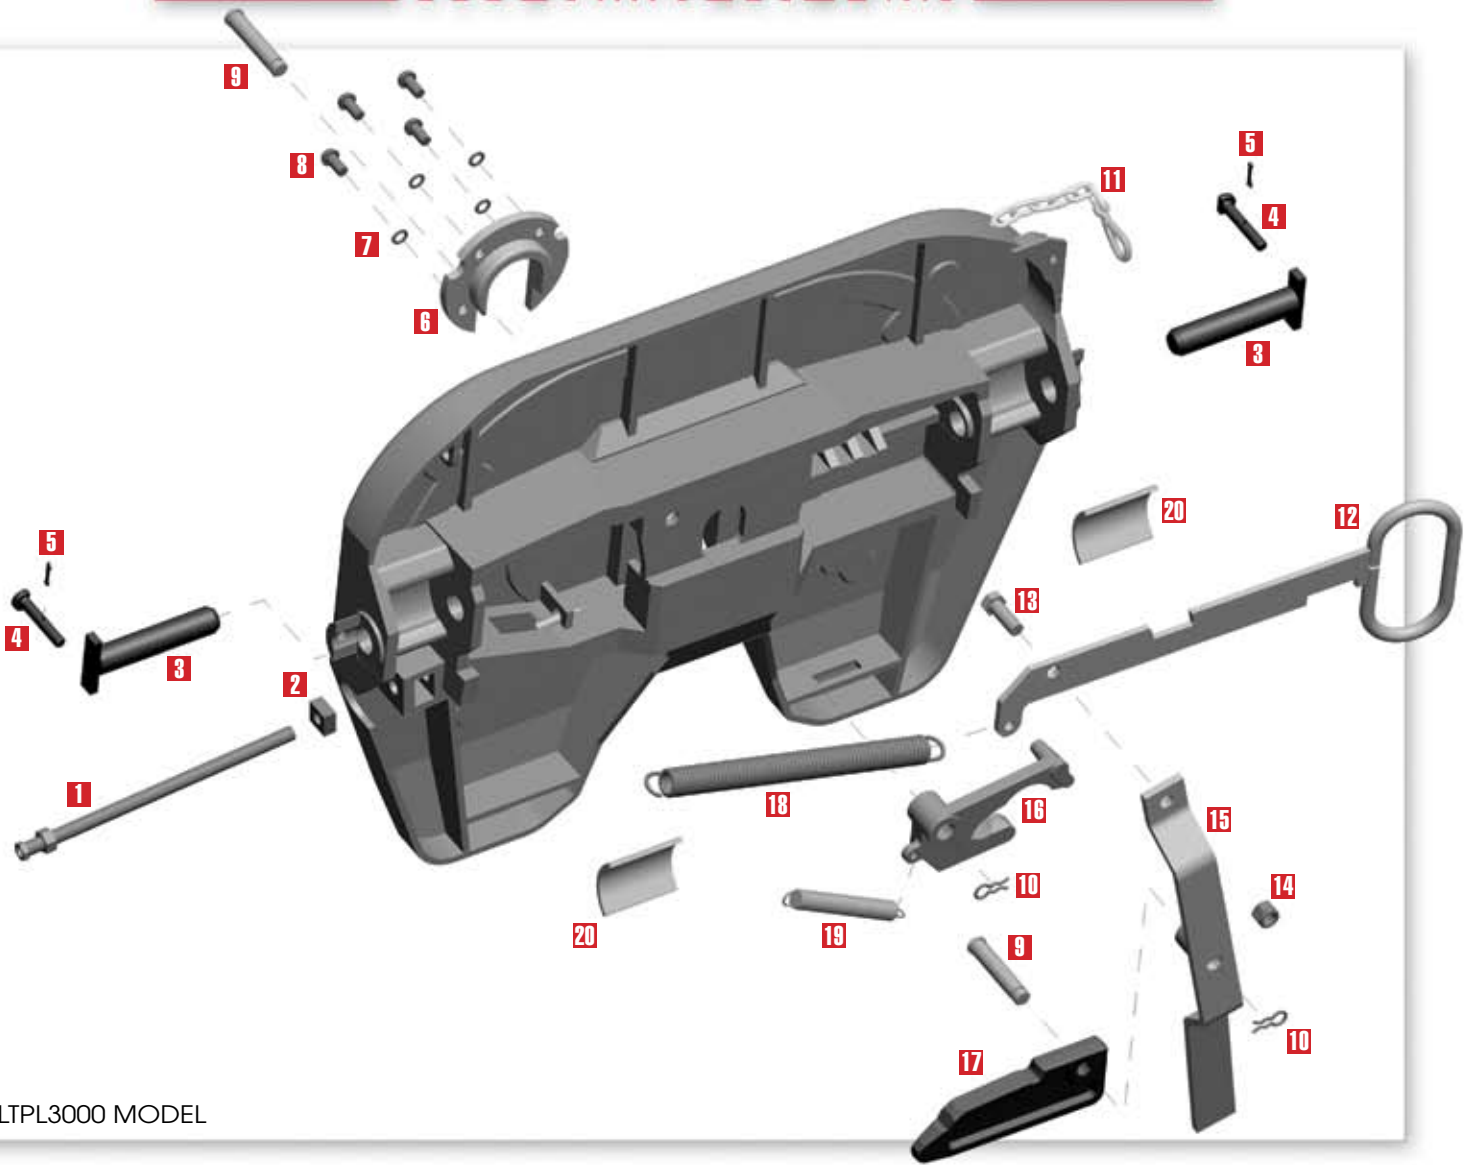

SLTPL3000 MODEL

Item	Description	Part No.	(Quantity)	Item	Description	Part No.	(Quantity)
1	Adjustment Rod	*	(1)	11	Security Clip	CLIP-3000	(1)
2	Adjustment Rod Nut, M16 Square	*	(1)	12	Pull Handle	*	(1)
3	Bracket Pin	PIN-3000	(2)	13	Hex Head Bolt, M16 X 45MM	*	(1)
4	Bracket Retainer Pin	PIN-124P	(2)	14	Lock Nut, M16	*	(1)
5	Cotter Pin	PIN-165*	(2)	15	Operating Handle	*	(1)
6	Wear Ring	*	(1)	16	Rotating Locking Jaw	*	(1)
7	Flat Washer, M12	*	(4)	17	Locking Wedge	*	(1)
8	Hex Socket Button Head Screw, M12X25MM	*	(4)	18	Main Spring	*	(1)
9	Pivot Pin	*	(2)	19	Jaw Spring	*	(1)
10	Pivot Pin Clip	*	(2)	20	Bracket Liners	LNR-3000	(2)

Order part BSH-3000 for a set of two Bracket Bushings (not pictured).

* Indicates the part is available in a repair kit. See Fontaine Schematic Catalog or Fontaine Parts List for details.



World Wide Headquarters • 5000 Grantswood Road • Suite 200 • Irondale, Alabama • 35210 • 800-874-9780 • Fax 205-421-4400

www.fifthwheel.com